# Uputstvo za instalaciju softvera *MySQL Community Server* v5.8 za razvoj *Java* aplikacija

NAPOMENA: za uspešnu instalaciju *MySQL Community Server*-a neophodan je operativni sistem Windows 7 <u>SP1</u>, ili noviji.


- 1. Otvoriti sledeću adresu: <a href="https://www.microsoft.com/en-us/download/details.aspx?id=40784">https://www.microsoft.com/en-us/download/details.aspx?id=40784</a>
- 2. Kliknuti na download:

Visual C++ Redistributable Packages for Visual Studio 2013




The Visual C++ Redistributable Packages install run-time components that are required to run C++ applications that are built by using Visual Studio 2013.

3. Odabrati pakete *vcredist\_x86.exe* i *vcredist\_x64.exe* i kliknuti na *Next*:

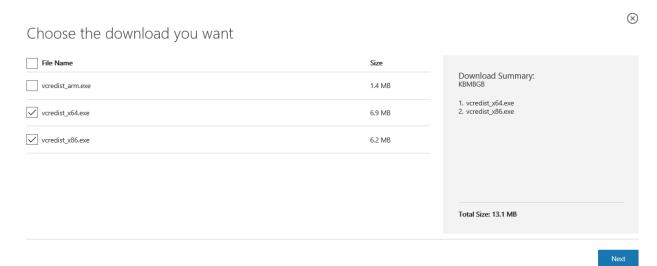


4. Prihvatiti ponuđene download-ove

- 5. Na isti način skinuti i par instalacionih paketa sa sledeće adrese: <a href="https://www.microsoft.com/en-us/download/details.aspx?id=48145">https://www.microsoft.com/en-us/download/details.aspx?id=48145</a>
- 6. Otvoriti sledeću adresu: https://dev.mysgl.com/downloads/windows/installer/5.8.html
- 7. odabrati obeleženi download:

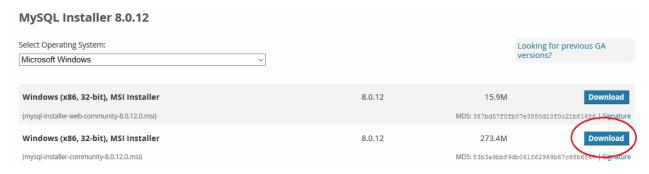


- 8. Prihvatiti ponuđeni download
- [\*] Za x86 operativne sisteme, trenutno ne postoji MySQL verzija 8. U tom slučaju umesto paketa iz koraka 7 skinuti instalacioni paket za MySQL verziju 5.7: <a href="https://dev.mysql.com/downloads/windows/installer/5.7.html">https://dev.mysql.com/downloads/windows/installer/5.7.html</a>
- 10. [\*] Za operativne sisteme **starije od** *Windows 8*, potrebno je instalirati i paket sa sledeće adrese: https://www.microsoft.com/en-us/download/details.aspx?id=42642
- 11. Instalirati *vcredist\_x86.exe*, *vcredist\_x64.exe*, *vc\_redist.x86.exe* i *vc\_redist.x64.exe* (ili one koji su mogući u zavisnosti verzije *Windows* operativnog sistema), a zatim pokrenuti instalaciju *mysql-installer-community-8.0.12.0.msi*:

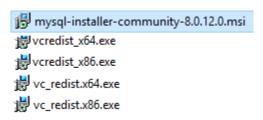


## U svim narednim koracima koji nisu eksplicitno navedeni kliknuti Next, odnosno Execute!

12. Odabrati *Custom* instalaciju i klinuti na *Next*:

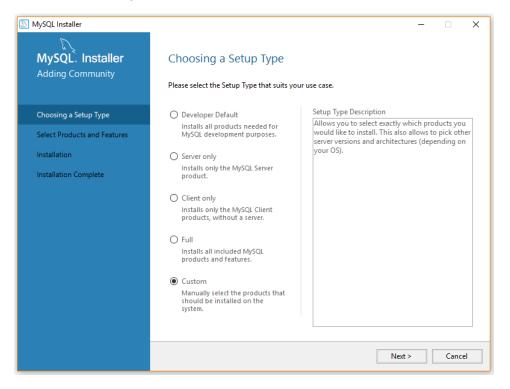


13. Odabrati komponente kao na slici (na slici su prikazane komponente za x64 verziju *Windows* operativnog sistema) i klinkuti na *Next*:

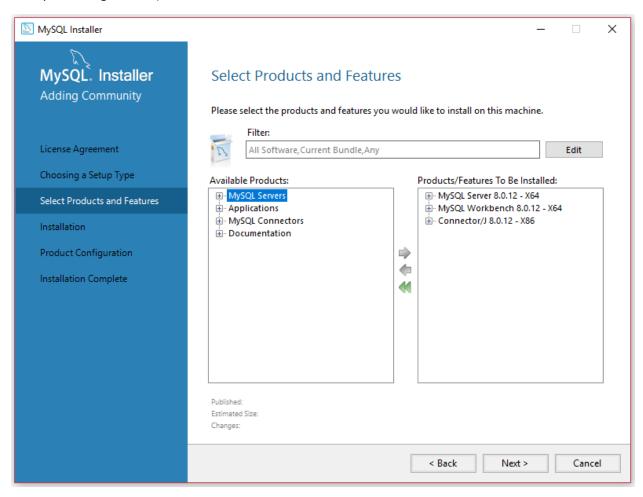


14. [\*] *MySQL Workbench* koji dolazi sa paketom je isključivo za x64 verziju operativnog sistema Ukoliko je verzija operativnog sistema x86 *MySQL Workbench* neće biti ponuđen na prethodnoj slici. **Za x86 verziju operativnog sistema** potrebno je <u>nakon ove instalacije</u> skinuti i pokrenuti poseban instalacioni paket za *MySQL Workbench*:

https://dev.mysql.com/downloads/file/?id=455785


#### 15. Klinkuti na Execute:

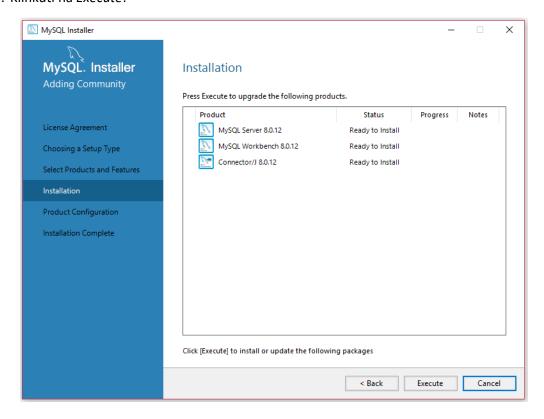


### 16. Nakon instalacije odabrati opciju kao na slici klinkuti Next:

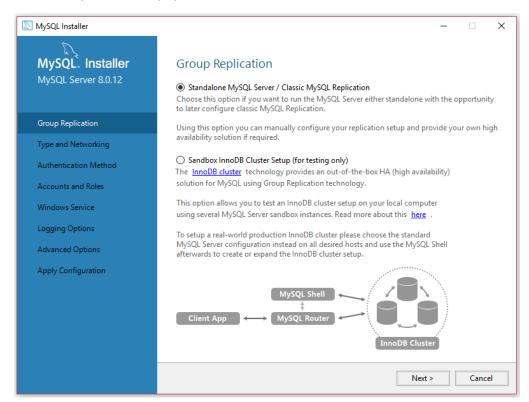


#### 17. Klinkuti Next:

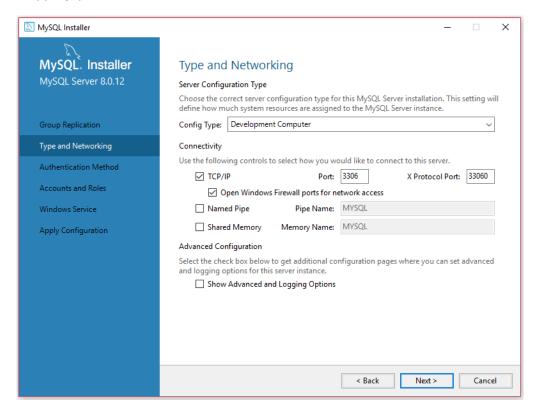

18. Odabrati opciju kao na slici klinkuti Next (ovaj korak ne postoji u verziji 5.7 MySQL instalacije):

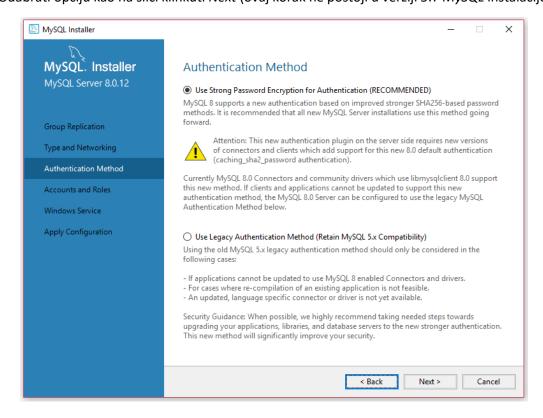

### 19. Uneti password za root nalog ("root"):

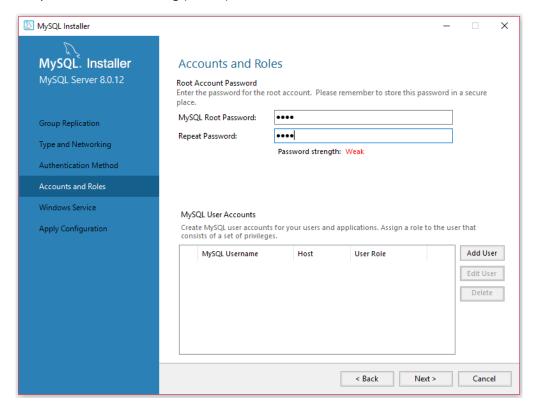

## 20. Kliknuti Next, odnosno Execute do kraja wizard-a:

